

## "13" - Battery temperature sensor fault

Error code	Cause	Result
13	Error with the temperature sensor inside of the battery.	The display shows the error code 13 and the motor cannot work.

### Component Description

The battery temperature sensor is used to detect the temperature inside the battery.

### Component Location

The battery temperature sensor is installed in the battery.

### Conditions for Running the Diagnostics

After the system is turned on, the diagnosis runs continuously.

### Error Phenomenon

The display shows the error code 13 and the motor cannot work.

### Conditions for Clearing the Error Code

After the diagnosis runs and passes, the system works normally.

### Troubleshooting

Step 1 Replace the battery.

Step 2 Clear the error code

Conditions: Connect all components, Turn on the system.

Specification	Solution
Error code 13 is inactive.	Repair complete.
Error code 13 is active.	Return to the step 1 or contact BAFANG if all steps have been completed and checked again.